

---

## vicolux<sup>®</sup> Area Light - A-DIF-60x90-B470-SL

---

<b>Short description:</b>	area light, blue, diffuse, lf-size: 60mmx90mm, smart light
<b>Order number:</b>	1-33-158
<b>EAN:</b>	4251692652367



---

### Characteristics

- LED area light with diffuse illumination
  - vicolux<sup>®</sup> smart light - Technology
  - flashable LED area light with diffuse illumination
  - safe operation due to vicolux<sup>®</sup> smart light Controller (e.g. DLC3005)
  - Ideally suited for multispectral applications in the NIR and SWIR range, thanks to simple combination with other illuminators of the same design
  - further lengths available on request
  - connection: cable with M8 connector
-

---

## Technical data

Light-emitting surface	60 mm x 90 mm
Light colour	Blue, 470 nm
Light design	Diffuse
Special feature	Flashable with flash controller
Power consumption	
• Continuous operation	8 W
• Flash mode	130 W
Radiance	
• Continuous operation	65 W/(m <sup>2</sup> sr)
• Flash mode	240 W/(m <sup>2</sup> sr)
Housing material	Aluminium, black anodised
Optical material	PMMA
Weight	215 g
Degree of protection	IP 50
Safety class	Class III, safety extra low voltage (SELV)
Risk group (DIN EN 62471)	Exempt
Ambient temperature	0 °C ... 45 °C

---

## Notices

The lighting can only be operated in conjunction with a lighting controller or a suitable current source.

vicolux® smart light lighting controllers limit the electrical parameters automatically and also monitor the temperature of the device.

---


## Can be combined with

Order number	Title	Description
<b>LED Controller DLC3005</b>		
1-30-202	DLC3005	LED lighting controller, digital, cont./flash current: 4.8A/18A, wall mounting
1-30-209	DLC3005-R	LED lighting controller, digital, cont./flash current: 4.8A/18A, DIN rail mounting


## Accessories for Area and Bar lights - A-DIF-60x90-B470-SL

Order number	Title	Description
<b>Connection cable M8-4pin</b>		
1-11-611	Cable-M8-4p-5A-straight-1m	4x0.5mm <sup>2</sup> , 5A, 30V, PUR, IP67, M8-4pin straight socket to free cable end
1-11-612	Cable-M8-4p-5A-straight-2m	4x0.5mm <sup>2</sup> , 5A, 30V, PUR, IP67, M8-4pin straight socket to free cable end
1-11-613	Cable-M8-4p-5A-straight-3m	4x0.5mm <sup>2</sup> , 5A, 30V, PUR, IP67, M8-4pin straight socket to free cable end
1-11-614	Cable-M8-4p-5A-straight-5m	4x0.5mm <sup>2</sup> , 5A, 30V, PUR, IP67, M8-4pin straight socket to free cable end
1-11-609	Cable-M8-4p-4A-straight-5m	4x0.25mm <sup>2</sup> , 4A, 60V, PUR, IP67, M8-4pin straight socket to free cable end
1-11-605	Cable-M8-4p-4A-angled-2m	4x0.25mm <sup>2</sup> , 4A, 60V, PUR, IP67, M8-4pin angled socket to free cable end
1-11-604	Cable-M8-4p-4A-angled-5m	4x0.25mm <sup>2</sup> , 4A, 60V, PUR, IP67, M8-4pin angled socket to free cable end
<b>Extension cable M8-4pin</b>		
1-11-093	Extension cable-M8-4p-5A-0.6m	4x0.5mm <sup>2</sup> , 5A, 30V, PUR, IP67, M8-4pin straight socket to M8-4pin straight plug
1-11-094	Extension cable-M8-4p-5A-1.5m	4x0.5mm <sup>2</sup> , 5A, 30V, PUR, IP67, M8-4pin straight socket to M8-4pin straight plug
1-11-095	Extension cable-M8-4p-5A-3.0m	4x0.5mm <sup>2</sup> , 5A, 30V, PUR, IP67, M8-4pin straight socket to M8-4pin straight plug

## Drawings

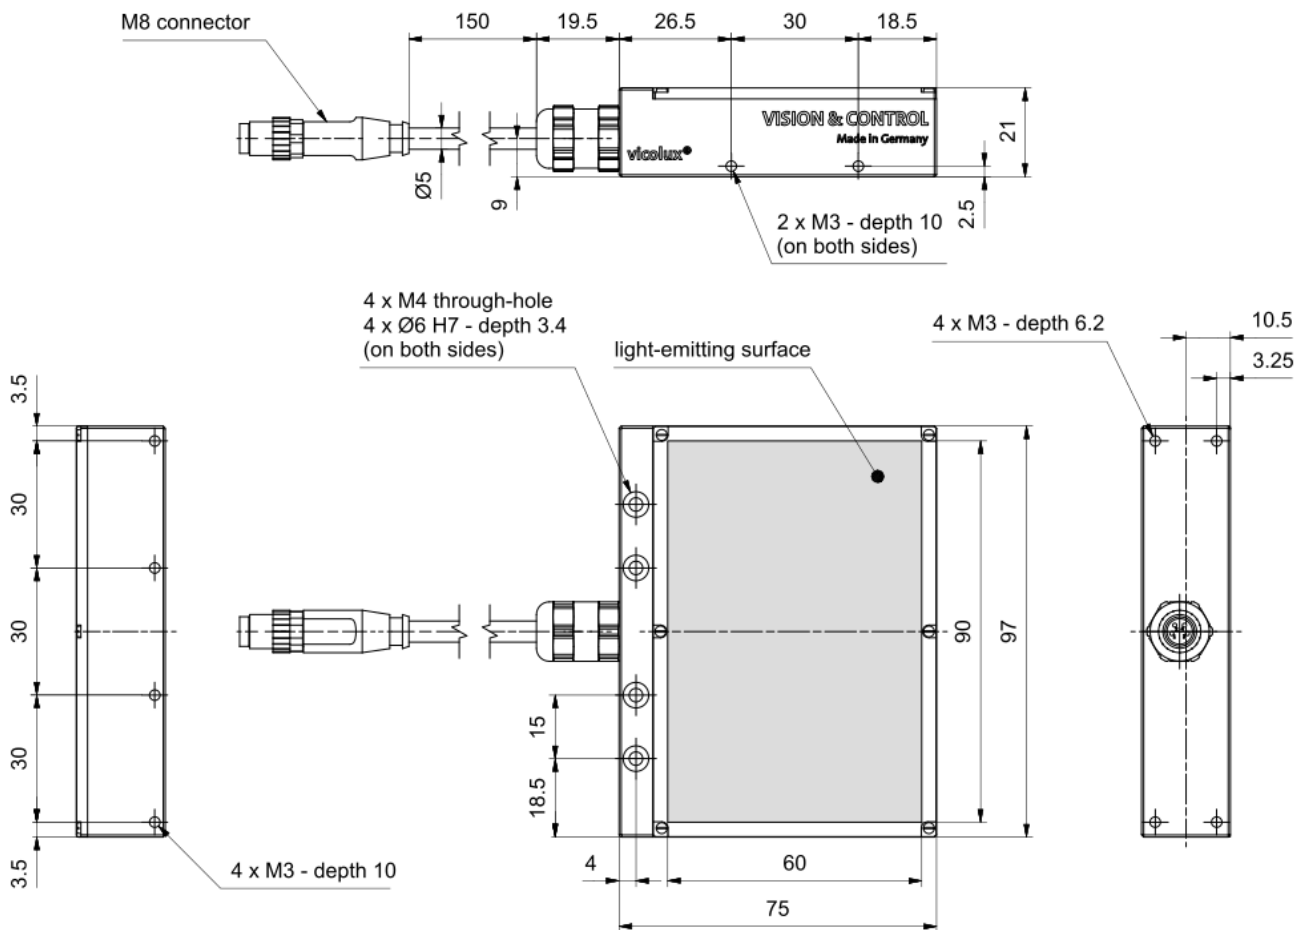

Dimensional drawing in mm

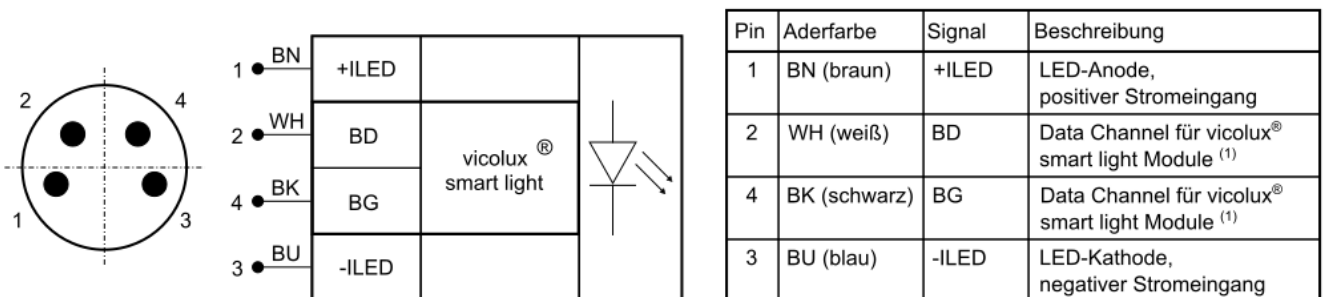

Pin assignment: M8 connector